Variable Of TECHSAS NetCDF Files For Single Beam Bathymetry

file *-sb_depth-PP_*.depth (directory ARCHIV_NETCDF/sb_depth)

VARIABLE	CONTENU
snd	sounding value at the given frequency
freq	frequency of transducer
time	acquisition time